

NOCKOUT[®]

LIGHTED NOCKS

INSTALLATION INSTRUCTIONS:

1. Select the correct “orange” nock adapter bushing to use with your bolt:

Small - .285 ID
Medium - .297 ID
Large - .300 ID

2. Press the nock adapter sleeve into the shaft.
3. With the Cock Vane down, ensure that the On/Off Tab is positioned at 3 o'clock as viewed from the Nock End of the shaft, press the Nock Receiver straight into the Nock bushing.

ACTIVATION:

1. With the Index Tabs on the Right, Rotate the On/Off Tab on the Silver Activation Collar up 45 degrees to Ready to Fire mode. Slight forward pressure will now turn on the LED.

EASY OFF:

1. Pull Nock Straight back until LED is Off (DO NOT TWIST THE NOCK)

PRACTICE MODE:

1. With the Index Tabs on the Right, Turn Off the LED, Pull the activation collar towards the Nock Receiver to disengage the Teeth, then rotate the On/Off Tab down 45 degrees until the Index Tabs on the Nock and the Activation Collar are aligned (Practice Mode).

GENERAL USE:

It is not necessary to switch the activation collar back and forth during use. Once you decide on the mode you want – **Practice Mode** (No LED) or **Ready to Fire Mode** – (LED lights at the shot), select your mode and shoot as many times as you like. You don't need to turn the activation collar again until you want to switch modes.

All three nock adaptors are included in the package.

Caution: Contains a lithium battery. Do not disassemble or incinerate. Keep out of reach of children. Contact poison control if swallowed. Recycle or dispose of properly. Carefully inspect your arrow and nock prior to each shot. Remove and discard any nock or arrow if you see any crack, chip, or other damage, as damaged arrows or nocks could fracture causing damage to the bow or injury to the archer and/or bystanders.



800-242-9023 info@clean-shot.com